

Thank you for choosing Rosetta hardscape products. The following are some helpful tips to make your first installation go smoothly. For more in-depth technical information, see our Rosetta Technical Guide (available at [rosettahardscapes.com](http://rosettahardscapes.com)) or contact Rosetta Tech Support.

*Your safety is important to us. Please follow OSHA guidelines, and utilize safety-toe boots, hardhats, gloves and eye, ear & respiratory protection whenever appropriate.*

## REQUIRED TOOLS

- LEVEL
- TAPE MEASURE
- LANDSCAPE ADHESIVE

## PATIO TOP INSTALLATION

- Fire pits should never be installed atop a patio surface. Rather, the fire pit should be “cut in” to the patio surface to avoid damage to the patio.

## SETTING THE PROPER CIRCUMFERENCE

- Place the steel liner, lip-side down, at the point of installation. Build the base layer around this liner to approximate proper circumference. Adjust the circumference as necessary. Remember to flip the steel liner, lip-side up, after completing the first row of block.

## PATTERN

- Follow the attached block layout pattern to build the fire pit.

## SECURING THE COPING

- Adhere the coping to the top row of block with landscape adhesive.



## VENTILATION CLEARANCE

- On the finished fire pit, the steel liner should rest approximately  $\frac{1}{4}$ " below the coping. This will allow for proper heat dispersal, extending the life of your fire pit.


# BELVEDERE FIRE PIT KIT

## QUICK INSTALL TIPS

### BLOCK LAYOUT PATTERN

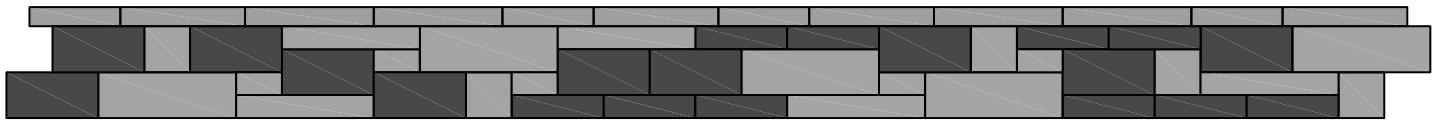

### TOP VIEW

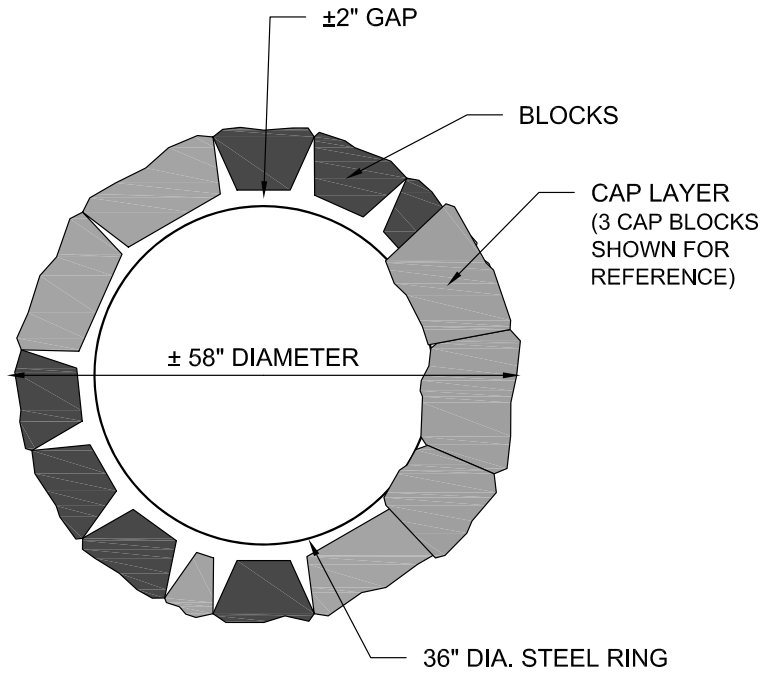

### CROSS SECTION

